

# ASSEMBLY MANUAL




## STEERING DAMPER CB 600 F HORNET 2007-2014

[www.avdb-moto.com](http://www.avdb-moto.com)



# avdb

## **STEERING DAMPER CB 600 F HORNET 2007-2014**

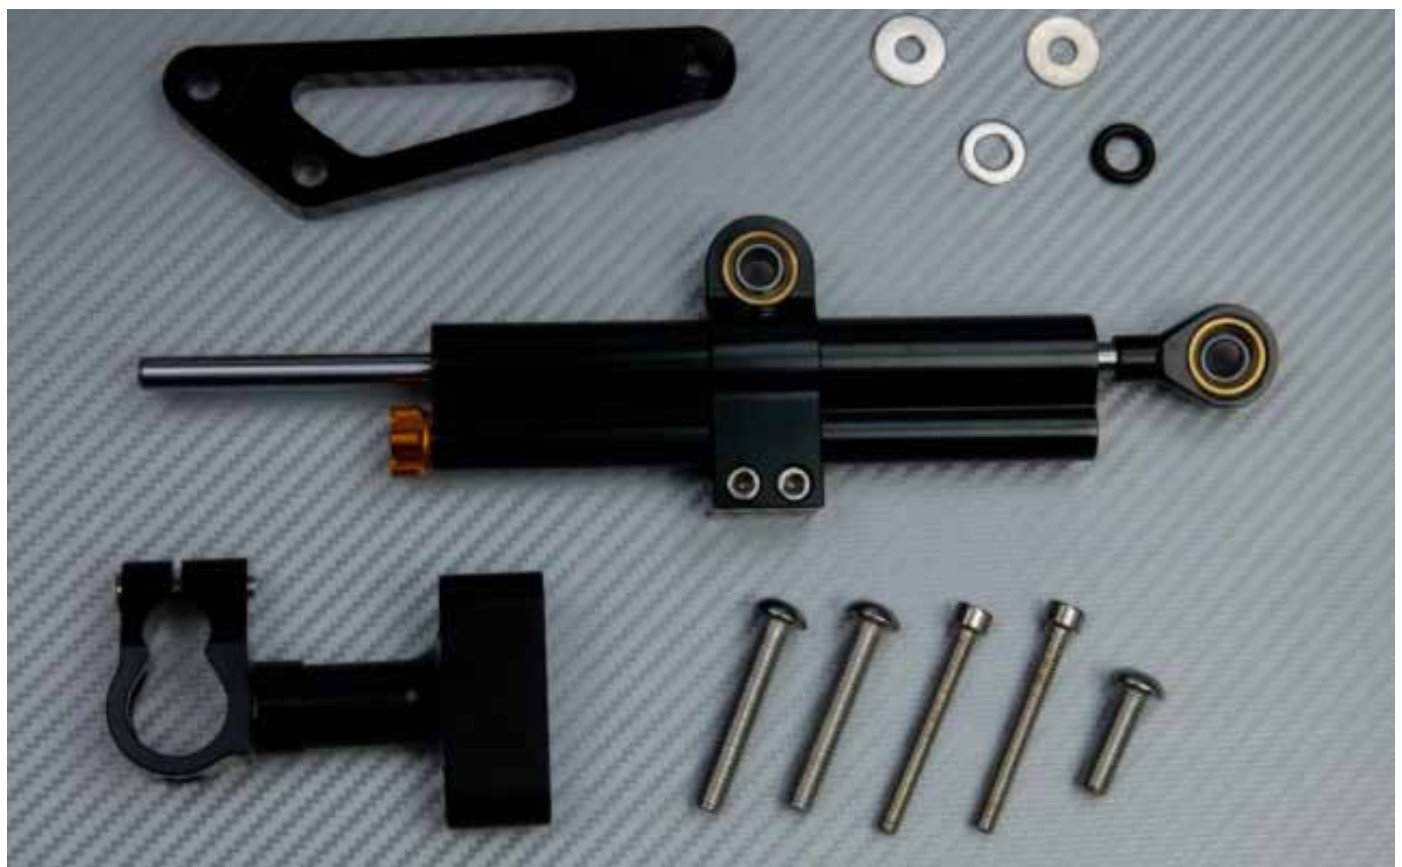



**1.** Take off the 2 screws of your handlebar's left riser and install the triangle-shape bracket with the supplied M8 screws (8mm diameter). The dot on the riser must always be directed towards the front side of the motorcycle.

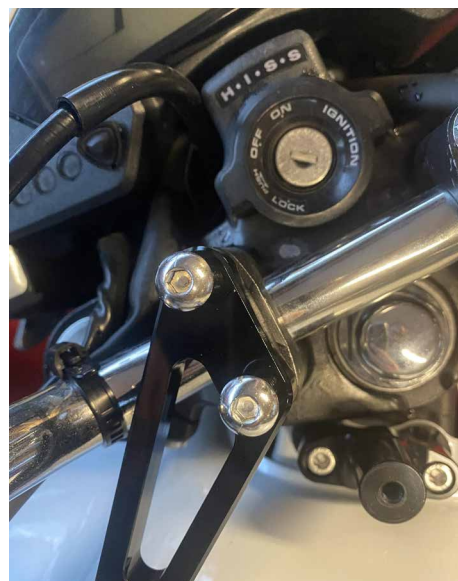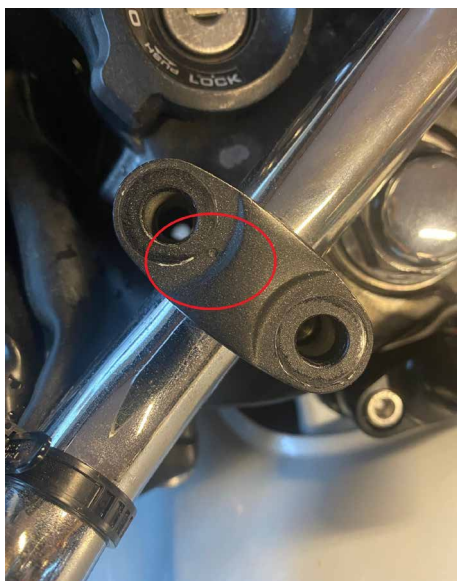


**2.** Take off the 2 screws fastening the front of your tank. Install the T-shape part using the supplied long M6 Hex screws (6mm diameter)



**3.** Install the steering damper's fastening clamp using the supplied M6 screw with round head and the 2 small washers with a 6mm diameter.



**4.** Insert the steering damper in the fastening clamp and fasten it to the triangle-shape bracket using the supplier M8 screw, the 8mm diameter washer and the 2 O-rings. Use 1 O-ring per side of the ball joint.

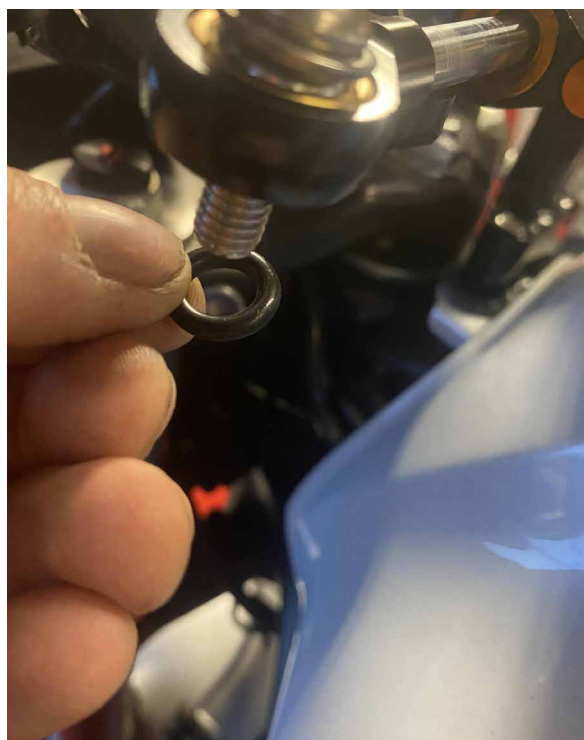



**5.** *Adjust the hydraulic cylinder in the clamp before fastening it, in order to make sure that the steering damper, when turning left and right, does not come hitting against the tank.*

