

MANUAL



REARSETS' ASSEMBLY
AVDB MT-07

www.avdb-moto.com


avdb

REARSETS' ASSEMBLY AVDB MT07



BRAKE PEDAL SIDE

1. *Uninstall the fastening screws from the master cylinder and the screws holding the original footrest bracket to the frame*

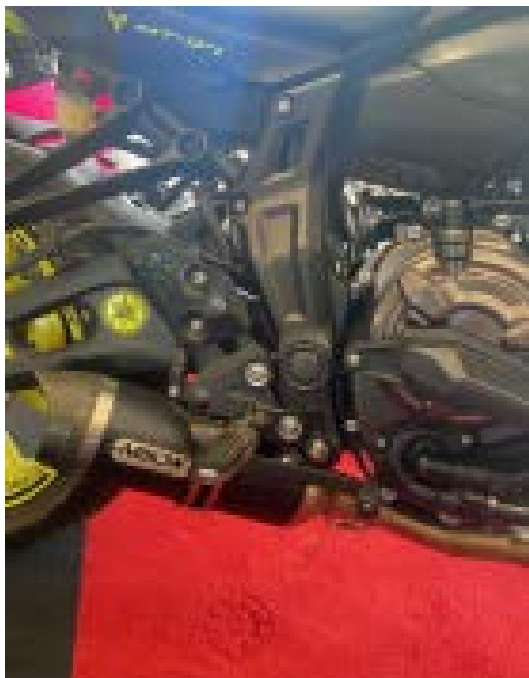

2. *Disconnect the master cylinder from the brake pedal and disconnect the contactor*




3. Reattach the new foot rests' bracket to the frame, as well as the master cylinder

(Make sure to position the connecting pin between the brake pedal and the master cylinder)



GEAR SHIFT PEDAL SIDE


1. Remove the fixing screws of the original footpegs' bracket on the frame and unscrew the gear shift rod.

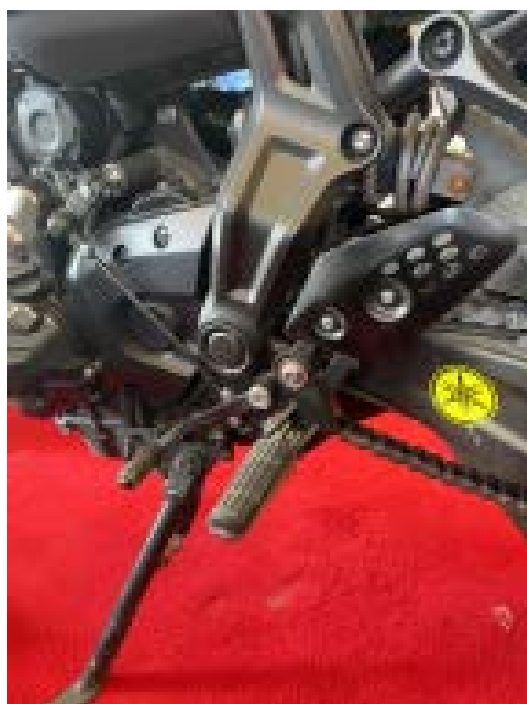

2. Assemble the new footpegs' bracket, making sure to position the large spacer behind the gear shift pedal, with the edge on the bearing side



3. Attach the new bracket to the frame and screw the new rod onto the original one
(Be sure to screw it them together correctly so that the rods do not come loose)

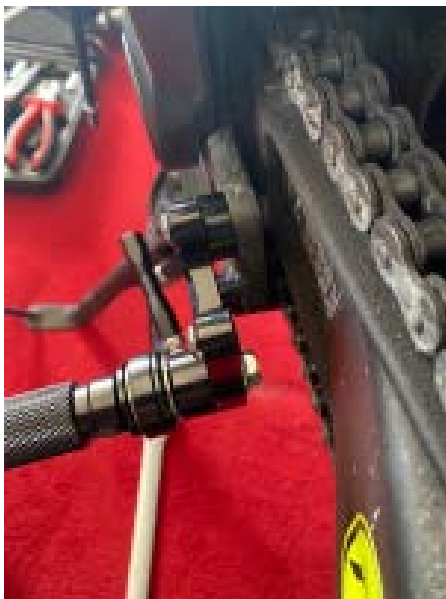

CAUTION

- 1_ It is very important to adjust the gear shift pedal's height using the gear shift rod, depending on your height and the gears' position (normal or inverted)**
- 2_ All counter-nuts must be safely screwed in and all screws must be secured using a blocking agent, such as Loctite.**