



Installation Instructions for Brake Lever with "R22" adaptor

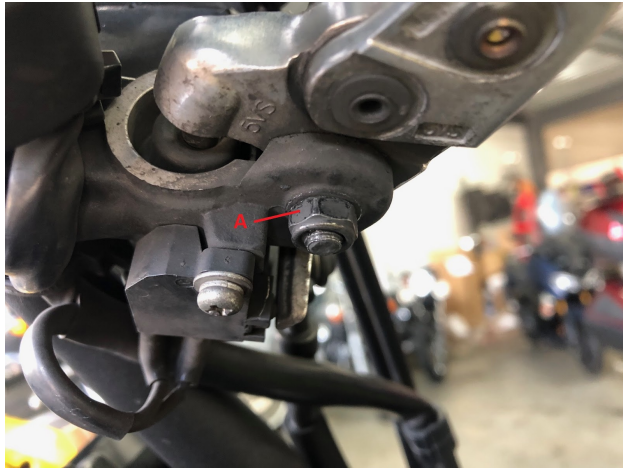

Etape1

- Unscrew fixing nut **A**, then unscrew screw **B**.
- Remove the lever from the brake master cylinder

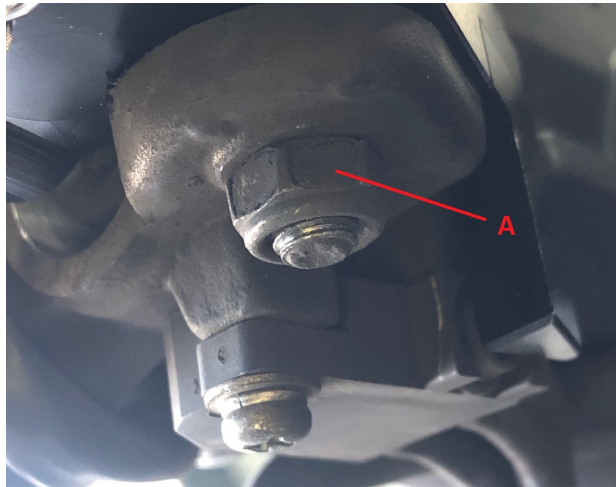

Etape 2

- Fit the new lever into the brake master cylinder, taking care to align the pin coming out of the master cylinder in the space provided
- Take care not to damage the rod coming out of the brake contactor
- Apply a small amount of grease to the non-threaded part of the screw **B**
- Tighten screw **B** then refit nut **A**, securing screw **B** with the appropriate tool.
- Use the tightening torque recommended by the manufacturer