

ASSEMBLY
INSTRUCTIONS



WINDSCREEN
(FAIRED MOTORCYCLE)

www.avdb-moto.com

avdb

WINDSCREEN (FAIRED MOTORCYCLE)




1. Unscrew the screws of your original windscreen and remove it.



2. Install the threaded rubber parts on the new windscreen



3. Place the new windscreen on the front fairing

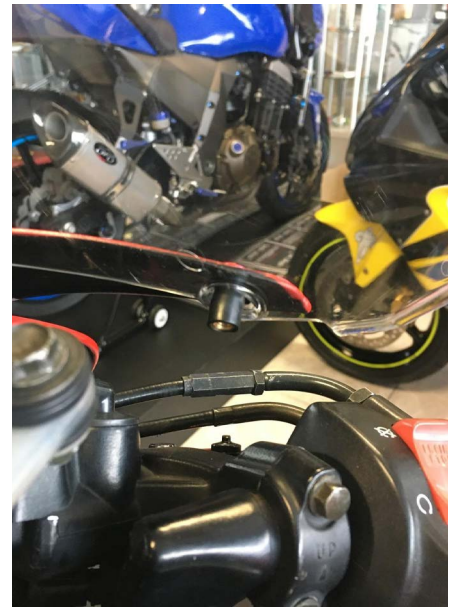

4. Install and screw in the specific windscreen screws. Screwing them on will “inflate” the rubber of the embedded nuts (threaded rubber part) and tighten the windscreen.

NOTE

This instruction is valid for 90% of the motorcycles' models : in some cases the fastening will be a little different and/or you will have to dismantle some fairings parts to reach the fixing screws (for example on : SV650S, VFR 800 V-Tec, etc...)